



EMERGENCY KEYPAD BUTTONS

These instructions will only work with Napco E-series & Gemini panels

THE **BLUE** EMERGENCY BUTTONS (**F**, **A** & **P**) ARE ALWAYS ACTIVE, WHETHER THE SYSTEM IS *ARMED* OR *DISARMED*. THE EMERGENCY SIGNAL WILL ONLY BE ACTIVATED WHEN THE RESPECTIVE EMERGENCY KEY & THE “*” KEY ARE PRESSED AT THE SAME TIME.

FIRE EMERGENCY:

SIMULTANEOUSLY PRESS THE **BLUE** “**F**” & “*”, TO ALERT THE CENTRAL STATION OF A FIRE EMERGENCY.

AUXILIARY EMERGENCY:

SIMULTANEOUSLY PRESS THE **BLUE** “**A**” & “*”, TO ALERT THE CENTRAL STATION OF SOME OTHER EMERGENCY.

POLICE EMERGENCY:

SIMULTANEOUSLY PRESS THE **BLUE** “**P**” & “*”, TO ALERT THE CENTRAL STATION OF A POLICE EMERGENCY.

SILENT AMBUSH:

For security purposes this procedure is not posted on the internet. Telephone the office during business hours to get your personal ambush instructions. (Monday–Friday 8am to 4pm)

WE PROTECT THE THINGS YOU TREASURE

FBN SYSTEMS, INC. ♦ PO BOX 1205 ♦ MEDINA OH 44258

(330) 239-1299 ♦ (330) 722-5276 ♦